


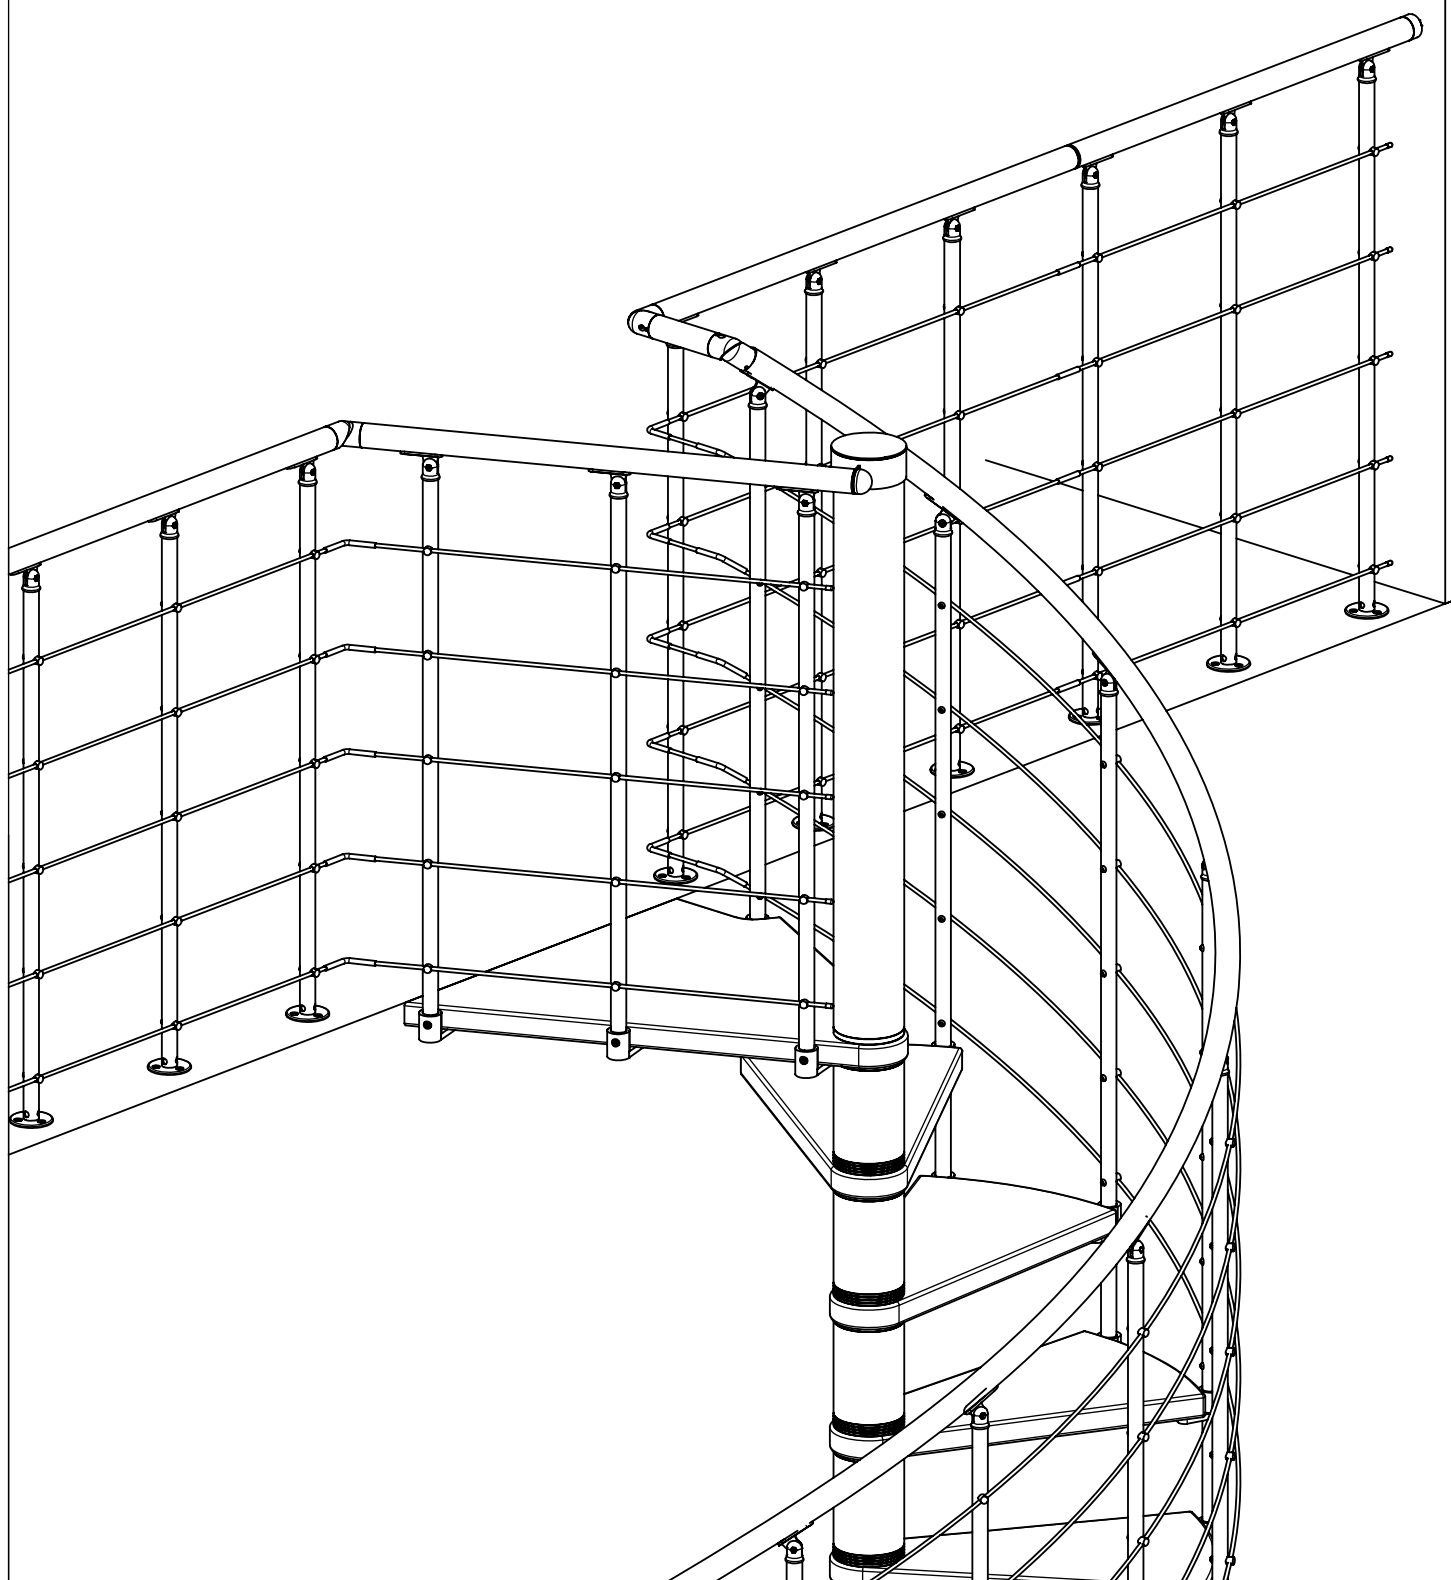
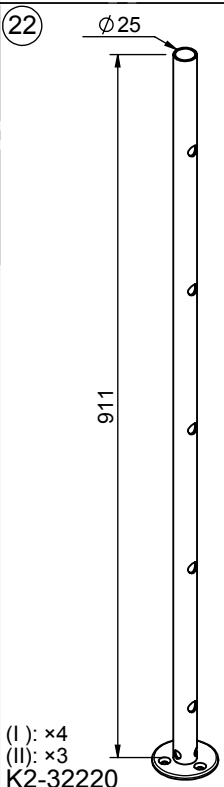



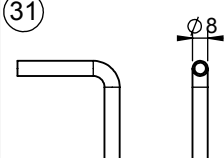
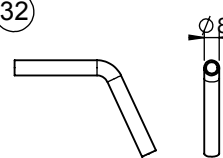




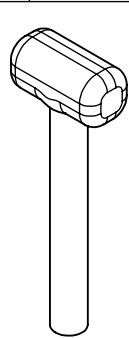
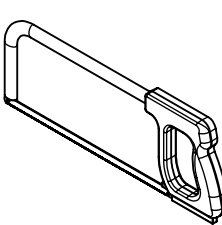
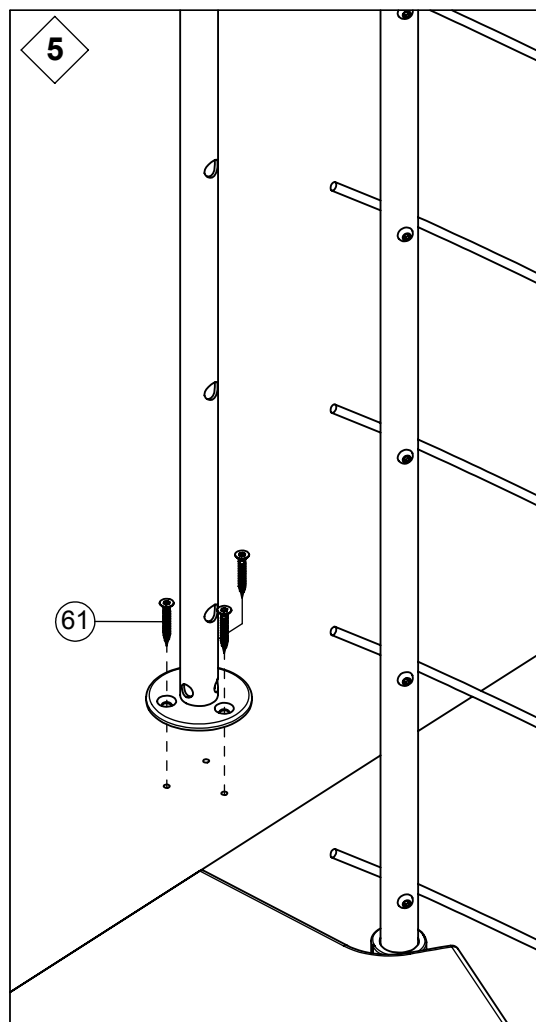
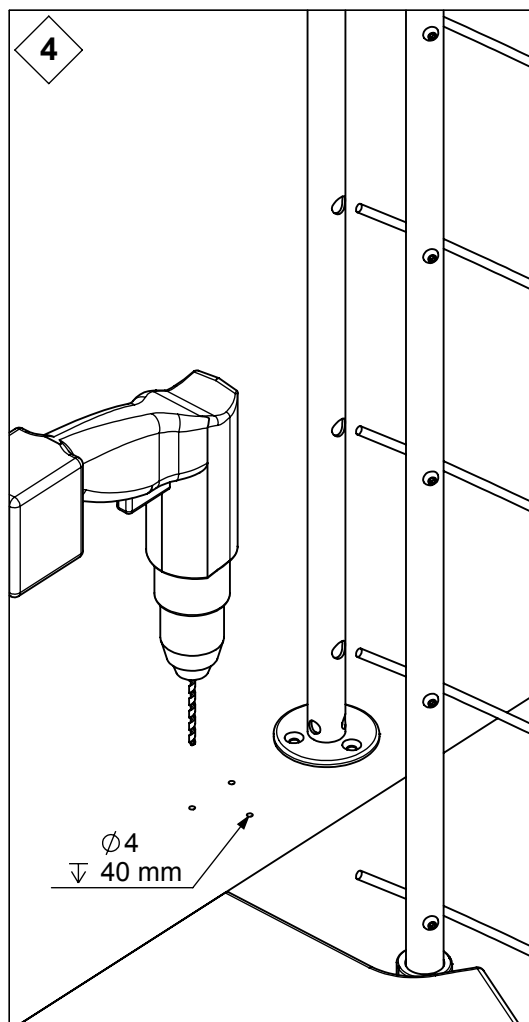


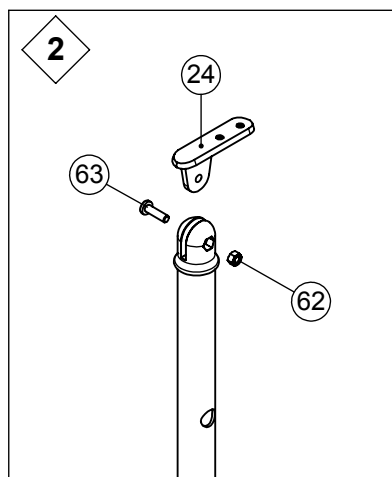


Einbauanleitung - Brüstungsgeländer - Oslo - grau
Mounting Instructions Balcony Banister - Oslo grey
Instructions de Montage de Balustrade - Osly gris

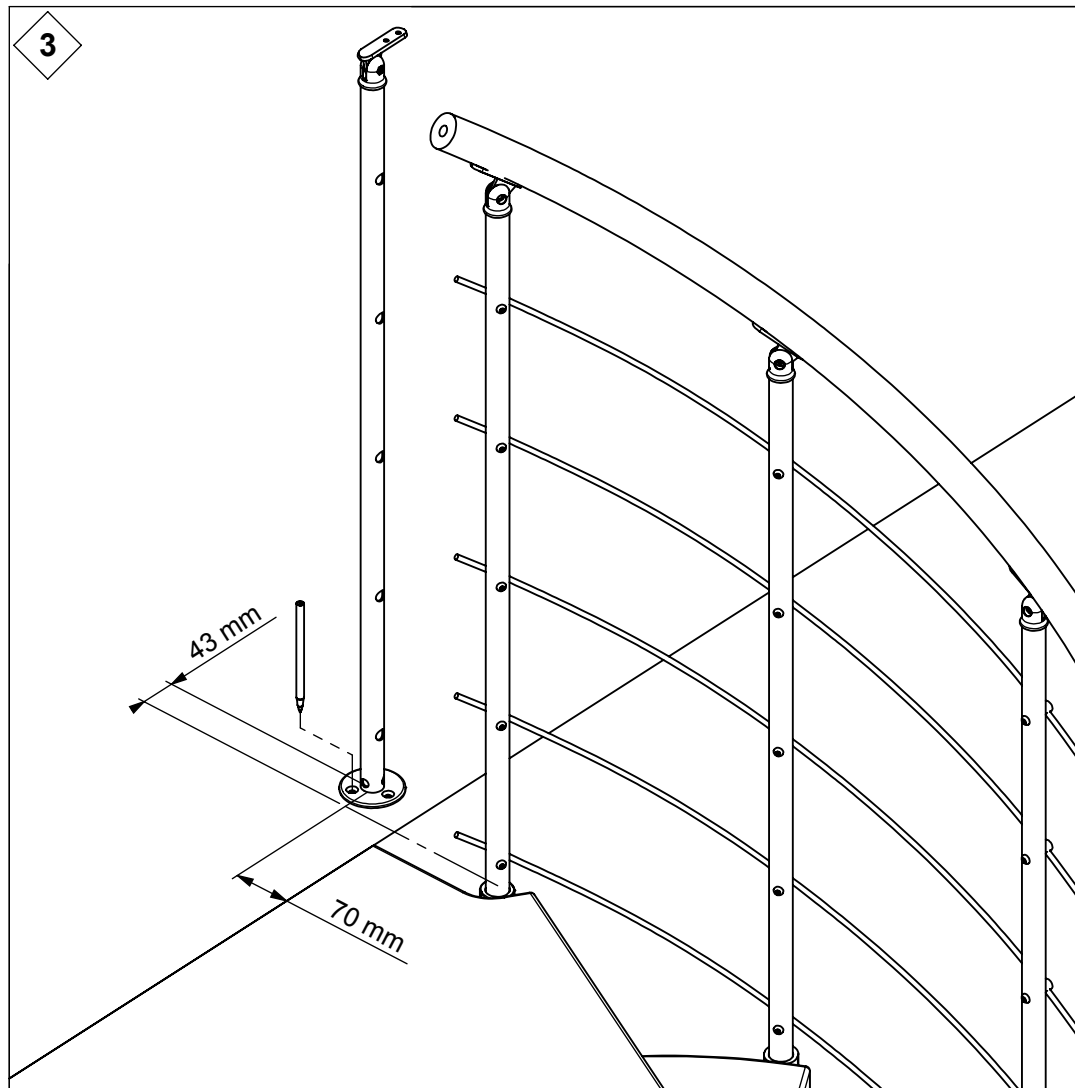


(I) Start kit (II) Extension kit		Kit de départ Kit de suite	Startpaket Extrapaket	Startpakke Ekstrapakke	
 (I): x4 (II): x3 K2-32220	 (I): x4 (II): x3 K1-32226		 (I): x20 (II): x15 K1-04041	 (II): x1 K1-32300	 (I): x2 K2-32040
	 (I): x5 (II): x5 K1-14070				
	 (I): x1 K2-32621				
	 (II): x1 K2-32622				
 (I): x5 K1-14941	 (I): x5 K1-14942	 x5 K1-04050	 (II): x5 K1-14939	 (I): x1 K2-32255	 (II): x5 K1-32630
 (I): x1 K3-90001	 (I): x20 (II): x15 K1-04040 M6x16	 (I): x4 R1-63616 Ø10	 (I): x21 (II): x15 K3-06022 Ø5x35	 (I): x4 (II): x3 K3-03020 M5	 (I): x4 (II): x3 K3-01002 M5x18
         Torx 25 Torx 40 PH 2					

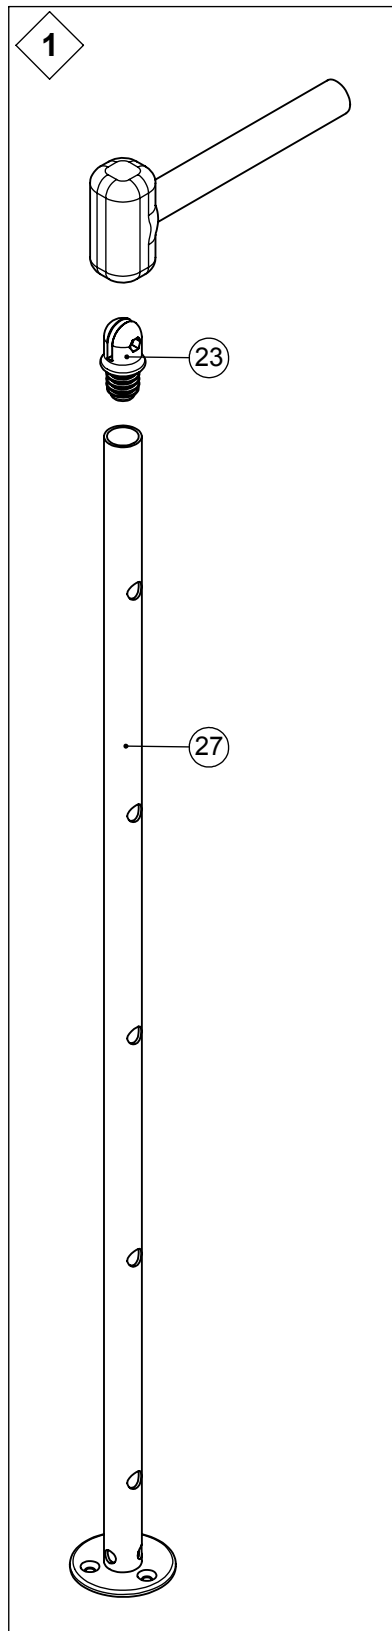


6

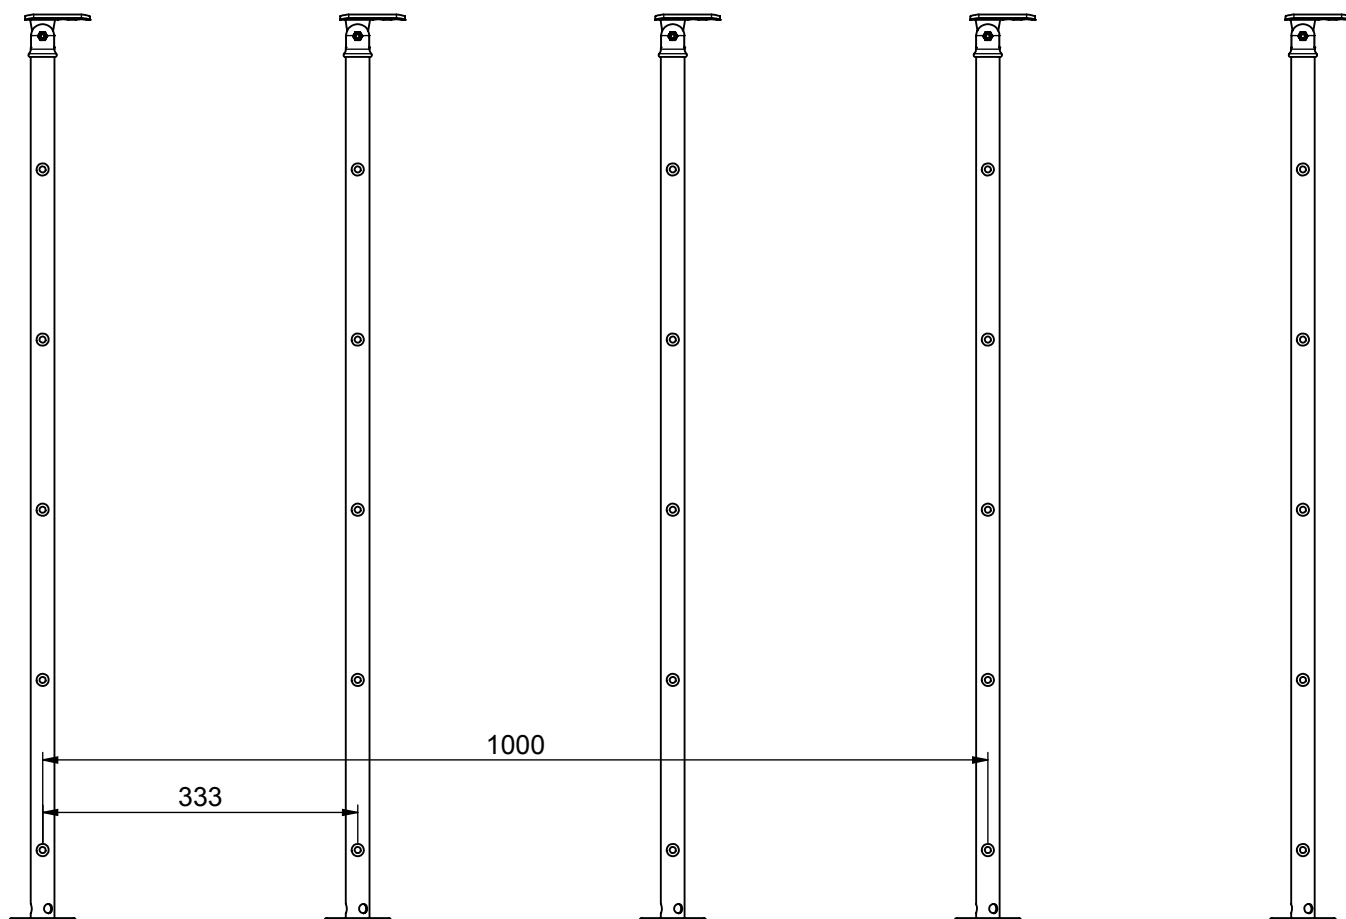

7

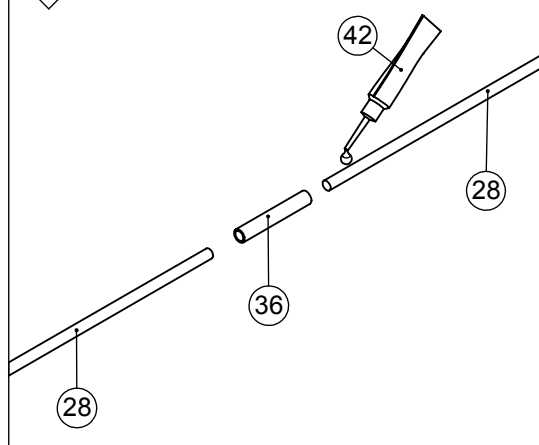

8

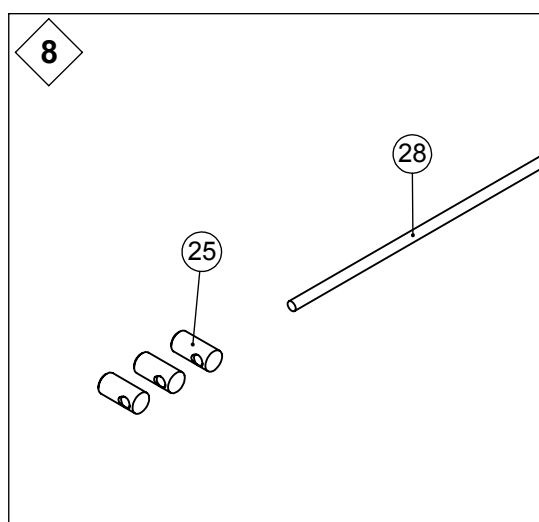

9

