


GARDENSPIN

Installation instruction – Balcony banister
Montageanleitung – Brüstungsgeländer

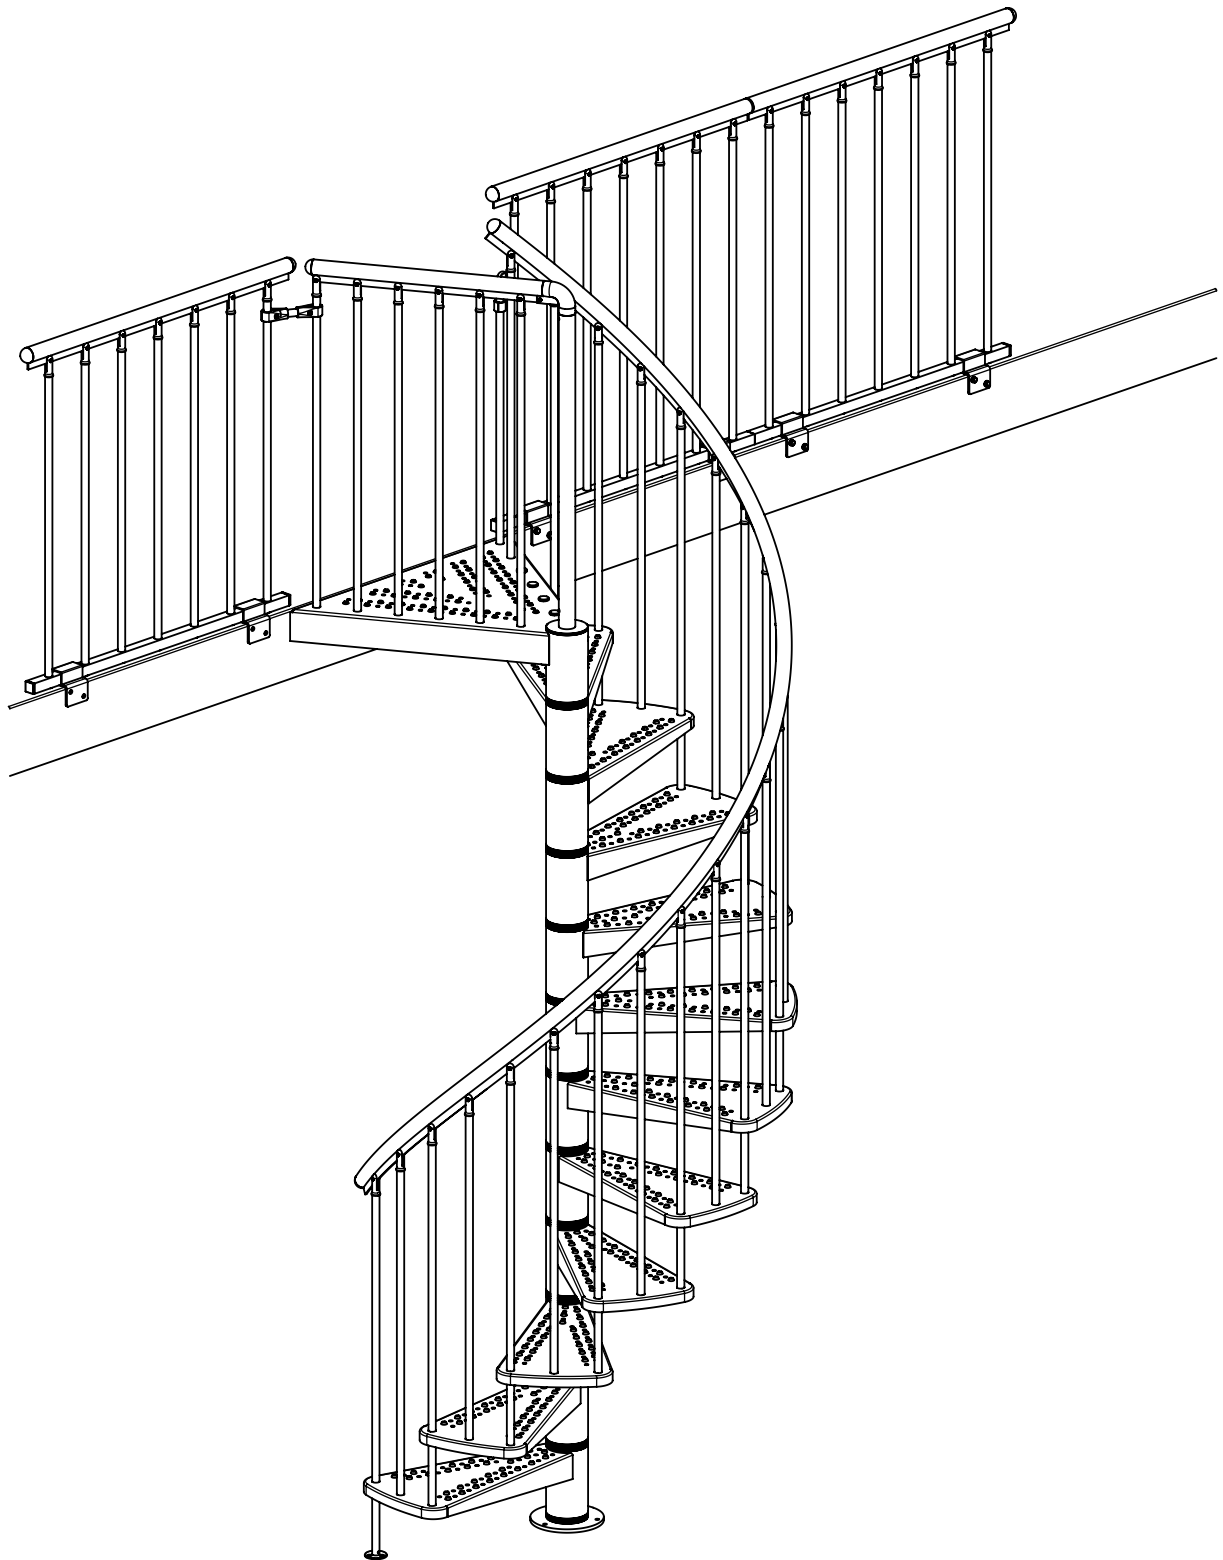

<p>1</p> <p>902mm</p> <p>(I) : x 7 (II) : x 7 K1-39170</p>	<p>2</p> <p>980mm</p> <p>(I) : x 1 (II) : x 1 K1-30270</p>	<p>3</p> <p>(I) : x 2 (II) : x 2 K2-30230</p>	<p>4</p> <p>(I) : x 2 (II) : x 0 K1-30020</p>			
<p>7</p> <p>Ø 42mm</p> <p>1000mm</p> <p>(I) : x 1 (II) : x 1 K1-38510</p>		<p>5</p> <p>(I) : x 7 (II) : x 7 K1-38591</p>	<p>6</p> <p>(I) : x 1 (II) : x 0 K1-19340</p>			
<p>8</p> <p>(I) : x 2 (II) : x 0 K1-38590</p>	<p>9</p> <p>150mm</p> <p>(I) : x 0 (II) : x 1 K1-39011</p>	<p>10</p> <p>(I) : x 0 (II) : x 1 K1-39012</p>	<p>11</p> <p>(I) : x 2 (II) : x 0 K2-39195</p>	<p>12</p> <p>68mm</p> <p>(I) : x 1 (II) : x 0 K1-39172</p>		
<p>14</p> <p>(I) : x 1 (II) : x 0 K2-30165</p>						
<p>20</p> <p>Ø8x60</p> <p>(I) : x 6 (II) : x 4 K3-06068</p>	<p>21</p> <p>Ø8</p> <p>(I) : x 6 (II) : x 4 K3-04041</p>	<p>22</p> <p>Ø10x60</p> <p>(I) : x 6 (II) : x 4 K3-08004</p>	<p>23</p> <p>M8x8</p> <p>(I) : x 13 (II) : x 11 K3-05020</p>	<p>24</p> <p>M5x14</p> <p>(I) : x 7 (II) : x 7 K3-01201</p>	<p>25</p> <p>M5</p> <p>(I) : x 7 (II) : x 7 K3-03050</p>	<p>26</p> <p>(I) : x 1 (II) : x 1 K3-90001</p>

I	II
Start kit	Extension kit
Kit de départ	Kit de suite
Startpaket	Extrapaket
Startpakke	Ekstrapakke

